

1. PRODUCT INTRODUCTION:

Dear customers, thank you for choosing our products! The machine is generous, novel, stable in performance, unique in function and easy to use. The phone adopts dual system (DTMF/FSK) compatible caller display keyboard, advanced microcomputer control. In order to make better use of the excellent functions of this unit, please read the instructions before use.

2. FEATURES:

- FSK/DTMF dual system caller ID (automatic identification)
- Caller ID and caller time record 50 groups (8 digits) or 32 groups (16 digits)
- Outgoing number 14 groups (8 digits) or 8 groups (16 digits) and call time record
- Real-time date and week display, LCD brightness 5 adjustable
- 1~99 hours without interruption
- 16 ordinary ringtone selection
- Software set ringing volume, button to set ringing volume and hands-free volume
- Software set electronic anti-theft; optional soft setting P/T
- FLASH time 90/95/100/120/180/300/600/1000ms software optional
- 3 sets of alarm function settings, each group has different alarm sounds
- Calculator function
- IP function and one-button storage function (M1-M10)
- R key transfer function
- Redial, pause and callback functions
- Automatically close the line when you forget to take the line or hang up (the line is free of clutter)
- Intelligent grab line outgoing code 8-bit setting
- Local code 8-bit setting, automatic caller filtering
- Ringtone volume adjustment
- Dial-up system conversion / dial lock control: keyboard digital control

3. MENU FUNCTION SETTINGS:

Press the setup button to enter the setup state during the on-hook state. The LCD displays SET 12345678. Press the number key or press the up/down key to select the setting option. The LCD also displays the corresponding setting item. After a certain setting is completed, press the delete key to exit the previous one. Directory, press the number keys or the up and down search keys to select the next setting item. (When using the up and down keys to select the setting item, to enter the submenu setting item of the item, press the setting button and then press the up and down keys to select. Here only the setting items are selected by the number keys). The specific setting items are as follows:

3.1.1 Setting the date/time: Press the SET button to select 1, and the LCD will prompt 1—DATE, 2—CL. Select 1 to enter the date setting, and see the font flashing. At this time, enter the number directly, and then press the Set button to confirm; when the date is set, the program will automatically recognize the day of the week, and select 2 to enter the time setting. The setting method is the same as the date setting. Press the handsfree button to exit.

3.1.2 Ringtone selection and ringtone volume adjustment: Press the setup button to select 2, LCD will prompt r 1t 2vip 3vol, select 1 to enter the normal caller ringtone selection, LCD display ring type 01 Press the up and down buttons to select the ringing tone, then press Set the key to confirm, press the delete key to return to the previous directory; select 2 to enter the VIP ringtone selection, the LCD displays ring vip 01, the setting method is the same as the ordinary ringtone; select 3 to enter the ringtone volume adjustment, the LCD display ring vol 03 is used up and down Press to adjust the ringer volume and press the speakerphone to exit.

3.1.3 Alarm setting: Press the setting button to select 3, LCD will prompt AL 1-2-3, select 1 to enter the first group alarm setting, LCD display ALAR OFF, see OFF flashing directly input alarm time, and finally Press the "Settings" button to confirm. To turn off the alarm, press the SET button to select a group to be turned off, then use the up and down buttons to select OFF; the other 2 groups are the same as the group 1 setting; The group alarm is one-time, and the second and third groups are daily alarms. During the alarm process, press any key to stop.

3.1.4 Do not disturb time setting: press 4 to select 4, LCD will display off_r 00-00, font flash input time (maximum value 99; minute maximum 59), press the delete button to exit. After the interruption function is activated, the LCD will display the do not disturb time. After the countdown to 00-00, the do not disturb will be automatically canceled, and the machine or hands-free will be released. During the Do Not Disturb period, the call does not ring (except the VIP number).

3.1.5 Special function selection setting: Press the setting button to select 5, the LCD will prompt 1-f 2-pt 3-d 4-f, select 1 to enter the flash time setting, LCD displays flash1 600, press the up and down keys at this time Select the time of the flash. The flashing time is: 90, 95, 100, 120, 180, 300, 600, 1000ms; select 2 to enter P-T conversion, LCD display pt tone, press the up and down keys to select the dialing mode, the initial value is the audio dialing state; Select 3 to enter the anti-theft settings, LCD displaydef off Press the up and down keys to select on/off. (The anti-theft code is *#).

3.1.6 Local Code and Outgoing Code Setting: Press the Set button to select 6. The LCD will prompt 1-LOC 2-OL to select 1 to enter the local code setting, and the LCD displays loc???? At this time, directly input 1~8 digits and press the setup key to confirm. To cancel the local code, press the delete key to delete the entered digit when inputting the status, and then press the setup key to confirm. Select 2 to enter the outgoing code setting, the screen displays out off, the setting method is the same as the local code setting method. To cancel the outgoing code, press the up and down keys to select OFF.

3.1.7 LCD brightness adjustment: press the setting button to select 7, LCD will prompt LCD on 4, press the up and down keys to adjust the LCD brightness, the default value is level 4, a total of 5 levels.

3.1.8 IP function setting: press the setting button to select 8, LCD will prompt 1-au 2-3-ip, select 1 to enter the automatic IP setting, LCD display au IP off Press the up and down keys to select the IP number, IP The numbers are IP1, IP2, 17909, 17908, 193, 17911, 17921, 17931, 17951, 17991, 068, 96300, 96333, 196, 190, 17969, 197, off; the default value is off. (IP1, IP2 are manual IP setting codes); (This machine does not have manual IP function)

3.2 hang up function operation

3.2.1 Callback: Press the callback button directly during pre-dial or number check to dial the selected number; if you want to add "0" in front of the number, press and hold the callback button for 3 seconds.

3.2.2 Incoming call inquiry: In the state of on-hook or off-hook, press the up or down button to view the caller information; press the # button for 3 seconds in the on-hook state to quickly enter the caller inquiry status.

3.2.3 Outgoing inquiry: In the state of on-hook or off-hook, press the query conversion button to enter the power-off check status, and then press the up or down button to check the outgoing information; press the * button for 3 seconds in the on-hook state. Can quickly enter the call-out status.

3.2.4 On-hook pre-dial: In the on-hook state, directly enter the phone number. If there is an error, you can use the delete button to modify. After the number is entered, you can dial the number directly by pressing the button or pressing the call-back button. When the time can be chased), long press the callback for 3 seconds to add "0" callback.

3.2.5 Delete function: In the state of entering the number, the delete key can be used to delete the wrong number; in the status of the inquiry number, the delete key can be used to delete the current number and its information or long press the key for 3 seconds to delete all calls or go. Electric number.

3.2.6. Hanging machine special function shortcut setting

One-button storage: Enter the number or flip the number under the pre-dial, and then press the Mx button (x is 1-27) to store.

The screen displays: SAVE, indicating that the storage is successful; directly press the Mx button to dial the number under the hook.

Calculator function: Press the calculation key to enter the calculator function, you can calculate +, -, X, ÷ within 8 bits.

3.3 Curing IP settings and cancellations:

3.3.1 Automatic IP: Use the 8th item in the setting to set the automatic IP, and after selecting the IP number, when hanging up, lifting the machine or calling back, if the first digit is "0", it will be automatically added before the dialed number. The set IP number, if you use "0" to dial back, will also add the set IP number.

3.3.2 IP-free function: In the state of automatic IP on, after pressing the machine, press the delete button before dialing. The number with 0 will not dial the IP, but dial out directly; if the outgoing code is enabled, press the button before dialing the phone. The delete button will also be filtered.

4. TRANSFER FUNCTION:

Press the Transfer button to transfer the call. The flash time is 95ms, and the switch can do some special functions.

The specific function is subject to the machine.

TELEPHONE

Instruction Manual



L019

Please read this manual before use

Set Date & Time

- Step 1 – Tekan "Set"
- Step 2 – Tekan "1"
- Step 3 - Tekan 1
- Step 4 - Input Date
- Step 5 – Tekan "Set" (Year-Month-Day)

Set Speed Dial (Memory)

- Step 1 - Tekan Number nak Save
- Step 2 - Tekan "M1" for 5 seconds (number sudah save)
- Step 3 - You can save save M2 – M10
- Step 4 - Try Tekan M1, number akan call out

Set Ring Tone

- Step 1 - Tekan "SET"
- Step 2 - Tekan 2
- Step 3 - Tekan 1
- Step 4 - Tekan "UP" dan "Down" pilih Ringtone
- Step 5 - Tekan "SET" (selepas Pilih)

Set High Low Ring Tone

- Step 1 - Tekan "SET"
- Step 2 - Tekan 2
- Step 3 - Tekan 3
- Step 4 - Tekan "UP" dan "Down" Pilih 1 ,2, 3, 4
- Step 5 - Tekan "SET" (1 – Lowest , 4 – Highest)

WITUMART TECHNOLOGY SDN BHD
WARRANTY CARDS

This certificate extends the warranty of basic telephone model HWC22 for a periods of twelve (12) months. This warranty covers the repair or replacement of the broken unit at our discretion.

Series Number :



The QR code will link to the YouTube and will walk you through the steps to set up your basic telephone.

Kod QR ini akan sambung ke YouTube dan menyediakan langkah untuk pemasangan.

Please subscribe to our YouTube channel for more product information.

Learn From YouTube



If you still facing any problem in the set up or need any warranty claim, Please feel free scan the QR code and talk to us in Whatapps.

Please leave a positive review if you are satisfied. Please talk to us before you leave any bad review. We always will do our level best to solve your problem

Jika Anda masih menghadapi masalah, sila mengimbas kod QR dan bincang dengan kami di Whatapps.

Sila beri penilaian positif jika anda berpuas hati. Sila bincang dengan kami sebelum anda meninggalkan sebarang komen negatif. Kami akan menyelesaikan masalah secepat mungkin. Terima Kasih

Talk To Tech. Support

WITUMART TECHNOLOGY SDN BHD
(123456789)